

ALL ACRYLIC SIGNS ARE SHIPPED WITH A PROTECTIVE FILM TO PREVENT SCRATCHES DURING TRANSIT.  
PLEASE REMOVE THIS BEFORE FITTING.

# Hidden Fixings Fitting Instructions

You should have the following parts provided by us:


- Metal Pins
- Epoxy Glue
- Sign
- Drilling Template

Additional tools you will need:

- Spirit Level
- Pencil
- Drill & 6mm Drill Bit

Please read all instructions carefully before proceeding and note that we do not take any responsibility for incorrectly installed signs or drilled holes. If you are missing any pieces from your fixing kit please get in touch with us before starting.

PROFILE VIEW

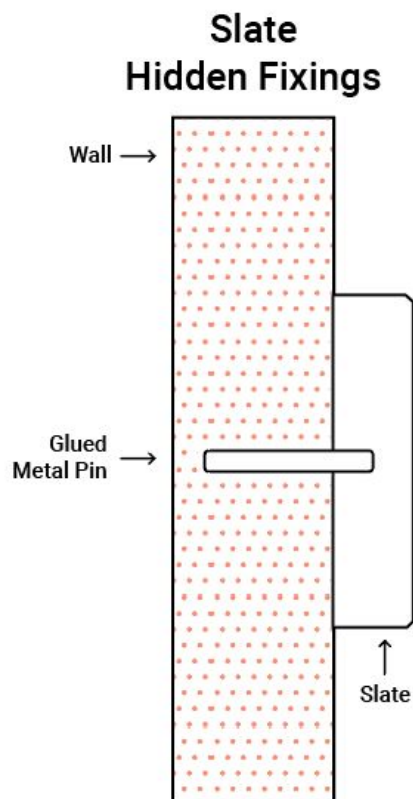

## Installing Your Sign

1. Using a level, place the template to the wall where you wish to fix your sign, it may help to tape it in place.
2. Using a 6mm drill bit suitable for the surface, drill through the template into the surface. Remove the drilling template from the wall and remove dust from holes.
3. If your sign has not already arrived with the metal pins pre-fixed to the holes in the sign you will need to do this using the glue provided.
4. Once the metal pins are fixed to the sign you will need to glue the sign to the wall using the pins. To do this place a bit of glue into each drill hole then push the sign in and hold in place whilst the glue sets.